

How to adjust the integrated ball head friction

1. Fully close the ball head lever
2. Unscrew the ball head lever using the provided Allen Key
3. Remove the ball head lever
4. Place the ball head lever quarter turn clockwise from the original position
5. Insert the screw and tighten the ball head lever using the provided Allen Key
6. Fully close the ball head lever and check the ball head friction
7. Repeat the above if additional friction is required.

