
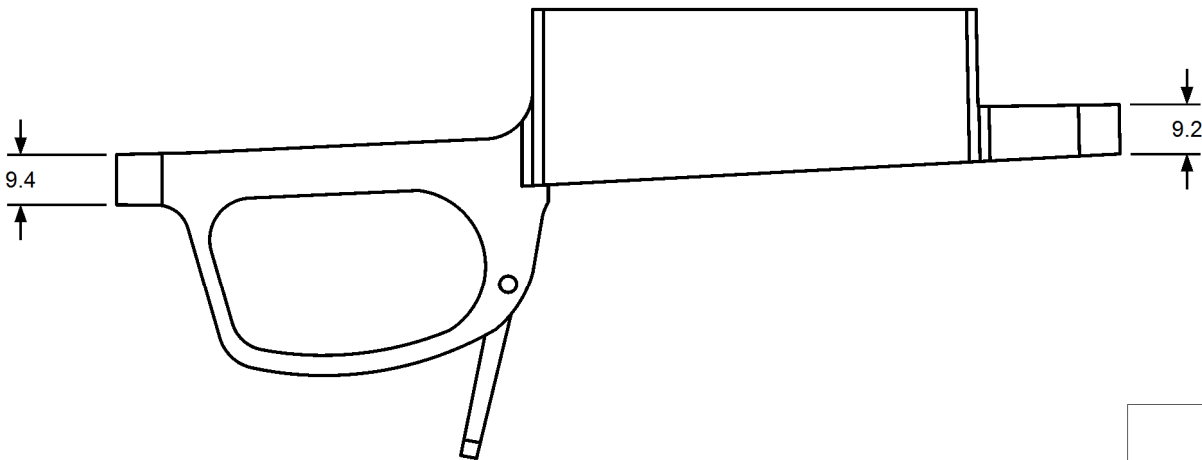


**Notes:**  
 1. Spare lever in package is 2mm Longer than the one installed.  
 2. If Bedding Pillars are used, the pillar height should be 27.2mm / 18.30mm (not supplied)

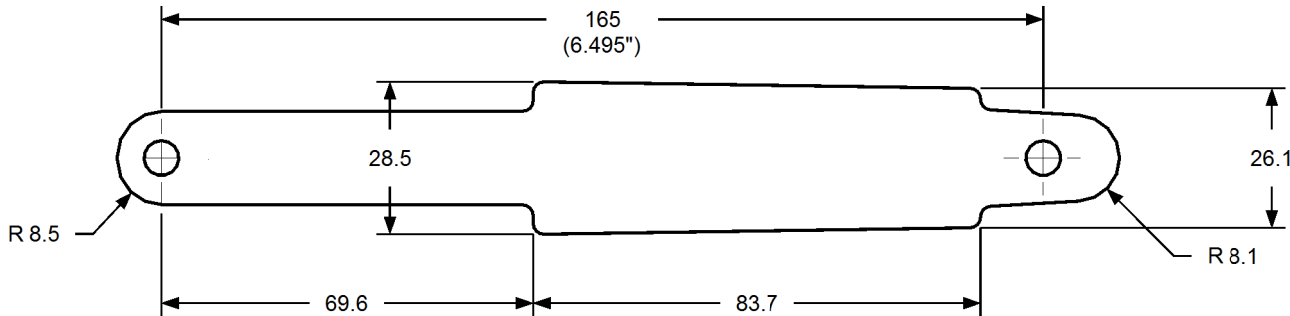

**SAFETY FIRST - MAKE SURE FIREARM IS UNLOADED BEFORE BEGINING WORK.**

Atlasworxs advices this product to be fitted and checked by a qualified Gunsmith. We accept no liability for damage or injury which may result from improper installation or use.

This item cannot be returned if it has been mounted or has any damage, scratches or marks on.



**ATLASWORXS**  
www.atlasworxs.com

Email: info@atlasworxs.com

All measurements in millimetres unless otherwise stated.

Project / Client			
Remington 700 SA DBM			
Title			
Inlet Template			

Date	This drawing is not to be released in whole or part to any third party without the express permission of Atlasworxs	Drawn	Scale	Drawing No	Issue
01/07/2017		CB	1:1	AW0038	B